

Save color/scene mode



- Step 1: Click ON/OFF button to activate the remote
- Step 2: Choose and click one or multiple paired zone numbers (e.g. zone 4)
- Step 3: Touch the color wheel or click the other buttons to select the scene you like
- Step 4: Press and hold any scene buttons of S1-S3 (e.g. S3), LED lights connected with the RF receiver flicker once means the color/scene was saved successfully.

Recall the saved colors/scenes



- Step 1: Click ON/OFF button to activate the remote
- Step 2: Choose and click one or multiple paired zone numbers (e.g. zone 4)
- Step 3: Click any scene buttons of S1-S3 (e.g. S3) to recall the saved scene

If you use multiple receivers, you have two choices:

Option 1: have all the receivers in the same zone, like zone 1




Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4



Built-in 10 color changing modes are as follows:

- Mode 1: Any two colors of RGB mix fade-in & fade-out
- Mode 2: RGB three colors mix fade-in & fade-out
- Mode 3: RGB three colors mix fade-out & fade-in
- Mode 4: RGB flash
- Mode 5: RGB three colors fade-in & fade-out successively
- Mode 6: RGB three colors fade-in successively
- Mode 7: RGB three colors fade-out successively
- Mode 8: RGB three colors jump changing successively
- Mode 9: R&B two colors mix fade (R in B out), then G fade-in, then R&B mix fade (R out B in), then G fade-out
- Mode 10: B fade-out, then G&B mix fade (G out B in), then R&G mix fade (R out G in), then R fade-in

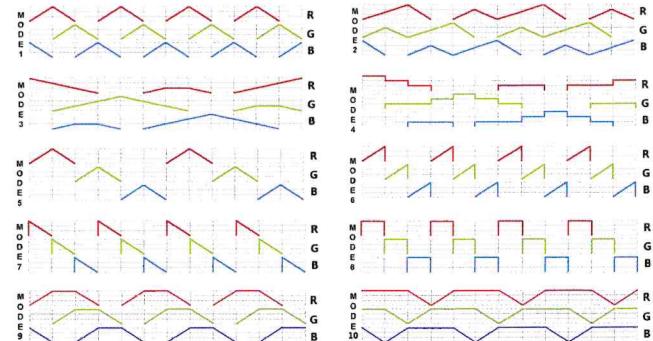

How to stop running mode of single color LED light caused by RGBW sender interference:

1. When pairing single color LED light to a single color remote, it might be interfered and paired by nearby RGBW senders, which might control the single color light into running mode. The running mode can not be stopped by the paired single color remote or by delete pairing.
2. Then we need this remote, and pair the remote to the receiver via above "Pair with RF receiver(Method 2)".
3. Then delete pairing and pair the receiver to the single color remote again, it can be controlled by the remote again.

RF RGBW Remote Controller

70010127

Important: Read All Instructions Prior to Installation

Function Introduction

White channel: Click to turn on/off. Press and hold down to increase/decrease light intensity of W channel.

Color wheel: Intensity of color channel. Click to turn on/off. Press and hold down to turn on/off corresponding zones.

Zone numbers: Click to choose the zone/zones. Press and hold down to turn off/on corresponding zones.

Click to turn On/Off all zones.

Press and hold down to decrease light intensity of RGB channels.

Click to switch CW, NW, WW mixed by RGB, double click to turn off RGB channels.

Press and hold down to save colors.

Click to recall the saved colors.

Click to speed up/down the running effect.

Click to play/pause the built-in effects. Press and hold down to save colors.

Front side

Pair with RF receiver(Method 1)

- Step 1: Do pairing the RF receiver according to wiring diagram (please refer to the instruction of RF receiver).
- Step 2: Touch the Learning Key of RF LED receiver.
- Step 3: Click the Learning Key of RF LED receiver.
- Step 4: Choose and click a zone number (e.g. Zone 4).
- Step 5: Touch the color wheel. LED lights connected with the RF receiver flicker once means the receiver is paired with the RF receiver.
- Step 6: Do pairing the RF receiver according to wiring diagram (please refer to the instruction of RF receiver).
- DO NOT expose the device to moisture.

Safety & Warnings

Output	RF Signal	Dimensions
RGBW color controller	High sensitive with high stable, fast & precise color control.	120x55x17mm
Power Supply	4.5V(3xAAA battery) + receiver can be paired by max 8 different remote controls.	Relative humidity 8% to 80%
Operation Frequency	869.5/915.4/434MHz	Operating temperature 0~40°C
• This device contains AAA batteries that shall be stored and disposed of properly.		
• DO NOT expose the device to moisture.		

Pair with RF receiver(Method 2)

- Step 1: Do pairing the RF receiver according to wiring diagram (please refer to the instruction of RF receiver).
- Step 2: Click the Learning Key of RF LED receiver.
- Step 3: Click the Learning Key of RF LED receiver.
- Step 4: Choose and click a zone number (e.g. Zone 4).
- Step 5: Touch the color wheel. LED lights connected with the RF receiver flicker three times continuously to set it into pairing status.
- Step 6: Do pairing the RF receiver according to wiring diagram (please refer to the instruction of RF receiver).
- Instruction of RF receiver: If receiver is paired with zone 4 successfully, flicker once means the receiver is paired with zone 4 successfully.
- Step 7: Click ON/OFF button to activate the remote.
- Step 8: Power off and power on the receiver.

Bottom side

4.5V(3xAAA battery)